


Scope Rings

Torque Specs

- Ring clamp screws: torque to 50-55 inch lbs.
- Ring cap screws: torque to 20 inch lbs.
- Scope base: torque to 15 inch pounds. (T15)

Tools Needed

- Ring screws are T25 for 30mm and larger.
- Ring screws are T25 for 1" sized ring clamps and T20 for their caps.

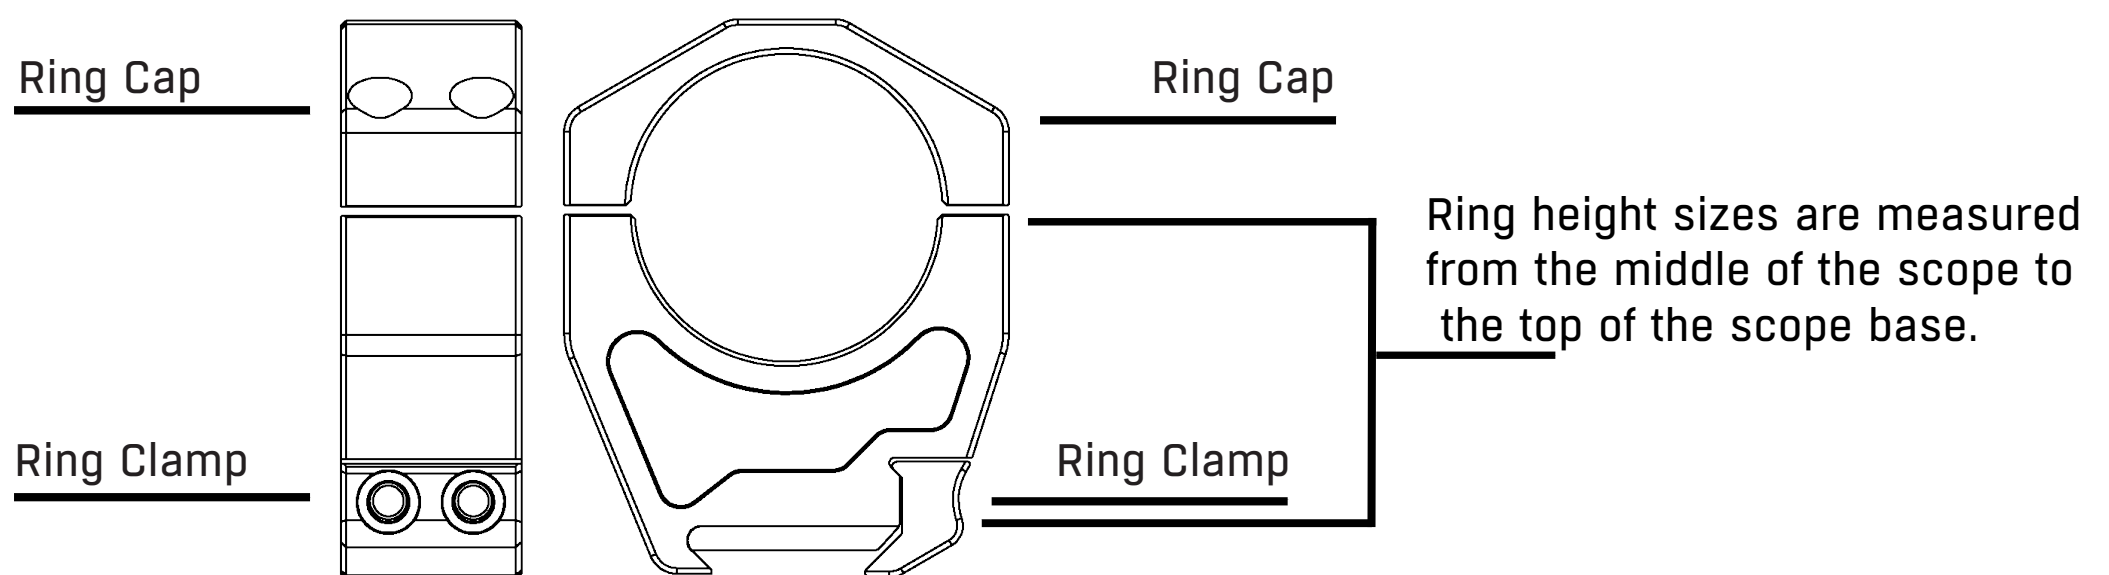

Product information

- 7075-T6 aluminum
- Type III Hardcoat Anodized matte black
- Never need to be lapped or altered in any way
- Scope Rings are .8" wide (4 screw cap)
- Ring sets 1.26" and taller have weight reduction machining in the bottom of the ring body.
- Built to the 1913 Picatinny specification, Seekins Precision Scope Rings have a center lug machined directly into the bottom. This integral, flat recoil lug is far superior to cross bolt lug designs and fits precisely into Picatinny slots with minimal clearance.
- For maximum torque and strength, Grade 8 T-25 Torx® fasteners are used that will not strip out while being tightened to the appropriate specification.